

WB Settings

Wb Mode: - White Balance Setting. Default is Auto, you may want to change manually depending on environment.

Picture Settings

2D NR: On/Off This acts as a noise Reduction. Similar to 3D NR but less advanced. Analizes and corrects pixels that likely represent Noise.

3D NR: This acts as a noise Reduction. 1 is the default channel.

WDR:- Wide Dynamic Range. Default is 0. This option adjusts the Cameras Image Quality under High Contrast lighting.

DeFog:- Changes Image quality in foggy conditions. Default set to 0.

De-Flicker: Adjust accordingly if your image is flickering. Default set to 60Hz.

System Settings:- Reload Preset 1: On/Off Version: V2003 Reset Settings:- Reset.

<u>S6</u>



Refer to User Manual for Specifications.




On/Off:- Press Power button for 3 seconds or until Power light turns Blue (On). No light for Off.

Pairing Bluetooth

You can use this device as part of your Video Conference System.

Long press on S6 Bluetooth button. Power light will flash blue.

Go to Bluetooth device page on Computer. This will now pick up the S6 device. Press Pair then connect.

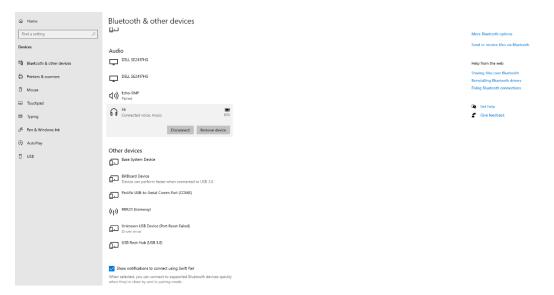

Test by playing music or a sound from Pc. The S6 has a 10 metre range and 6 microphones so for best use please be sitting at least 1 metre away from the device.