

TBC-VC-8000



Power


Audio in/Out

USB 3.0.

Setting Up.

Plug in Power and USB. Use Audio ports for additional Microphone/Speakers.

Camera Menu

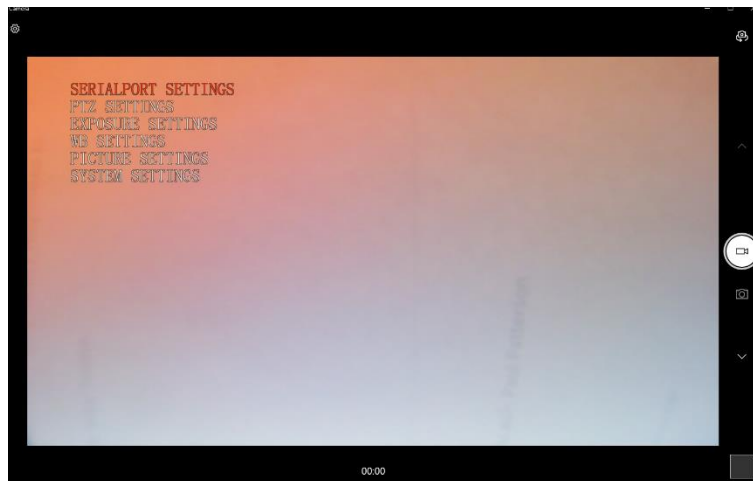

Ptz Settings

Pan Direction:- Normal – Camera moves same direction as arrow keys. Inverse:- Camera moves opposite direction of arrow keys.

Tilt Direction:- Normal – Camera moves same direction as arrow keys. Inverse:- Camera moves opposite direction of arrow keys.

Flip:- On or Off. When mounting the camera from the Ceiling you will want Flip On.

Mirror:- On or Off.

Mic Switch:- Switch between current Mic and External Mic when 3.5 plugged in to port.

Mic Mute:- On/Off

Exposure Settings

Ae Mode:- Different Options, best to leave on Auto as best result. If you divert from Auto you may see flickering.

Backlight:- On/off

WB Settings

Wb Mode: - White Balance Setting. Default is Auto, you may want to change manually depending on environment.

Picture Settings

2D NR: On/Off This acts as a noise Reduction. Similar to 3D NR but less advanced. Analizes and corrects pixels that likely represent Noise.

3D NR: This acts as a noise Reduction. 1 is the default channel.

WDR:- Wide Dynamic Range. Default is 0. This option adjusts the Cameras Image Quality under High Contrast lighting.

DeFog:- Changes Image quality in foggy conditions. Default set to 0.

De-Flicker: Adjust accordingly if your image is flickering. Default set to 60Hz.

System Settings:- Reload Preset 1: On/Off Version: V2003 Reset Settings:- Reset.

S6



Refer to User Manual for Specifications.