



* 70mm	. 70mm	70mm	70mm	
How to connect	You can make the camera settings you	Mac	Frame Rate 1920×1080,1280×720, 640×480	
	 need. Camera set key If there are multiple cameras or the camera is not displayed, please click to replace the camera. <i>Replace camera key</i> <i>Replace camera key</i> Win8 Start button, click the camera to confirm whether the camera is connected normally. If the screen normally plays back the images captured by the camera, the camera is successfully connected. 	• Start the "photo booth" and select	Focus Mode Auto	
		the MC3000 from the camera	Aperture Mode Auto	
		Photo booth	Backlight Compensation Support	
		<u></u>	Wide Dynamic Support	
			Picture Adjustment Brightness, Chroma, Saturation, Contrast, Acutance	
			Microphone Parameter	
HDMI		The preview screen will play the image taken by the MC3000	MIC Array Quantity 4	
Cable			MIC Array Form linear	
		USB camera key	MIC Specification digital microphone	
Television (or projector & displayer)			Sampling Rate 16KHz/48KHz	
Computer			Sensitivity -26dBFs	
How to confirm that this product is correctly recognized			Far-field Pick up Voice Distance 0-10meters	
the computer.	Camera key o	4. Product Specification	Horizontal Voice Pick up Angle Horizontal 180°	
the process of running the application, if you change the	l Next page	Specification Model MC3000	SNR 65dB	
nnector or settings, it may not be recognized immediately,	You can make the camera settings you	Camera, lens Parameter	Communication Mode full duplex	
ease end the application once and start again.	need.	Image Sensor 1/2.8inch CMOS	Interface Parameter	
in10	If there are multiple cameras	Min Lux 0.1Lux(F1.2)	Video Interface USB2.0 HDMI	
Start button, click the camera to confirmwhether the camera is connected normally. If the screen normally plays back the images captured by the camera, the camera s successfully connected.	or the camera is not displayed, please click to replace the camera.	Effective Piexl 2.2 million pixels	Video Compressed Format MJPG/H.264	
		Zoom 12X Optical	Control Interface RS-232, USB2.0, UVC	
		Shutter Speed 1 to 1/10000s	Control Agreement VISCA/PELCO-D/PELCO-P	
		Horizontal Field of View 69.4° (W) ~ 6.55° (T)	Communicate Baud Rate 2400/4800/9600/11520/19200/38400	
			Power Interface DC-038 power socket (DC12V)	
	Replace camera key		Video Interface USB2.0	
3	4	5	6	

6. Precaution

•Electrical Safety

Confirm country and local electrical safety standards when using or installing the product. The product itself has no power switch. Please stop power supply or plug out power socket when it is not in good working. Video wire and control wire should be insulated and individual connected, can't mix-up with other wires.

•Transportation with Care Product should be protected against extremes of stress, vibration and moisture in transport, storage and installation. It is transported by integrated packing style.

 Power Supply Product supplies 12V DC power.

- Installation with Care
- Don't turn the camera head manually. Doing so may result in mechanical damage. The product should be put on a stable horizontal table and
- does not be installed at a tilt, or else, which may cause a tilted Don't focus the camera directly on the sun or other bright
- objects no matter when in use or not. Otherwise, it may affect image guality.
- Don't apply corrosive liquid, gas or solid, to avoid damaging the cover which is made up of plastic material. Make sure there is no obstacle with the camera's rotational
- range when installing.

9

selftest normally. 3) To check whether the USB port and USB cable of the terminal device are connected correctly.

or dismantling.

Image aspect

7. FAQ Processed

•No image displayed

the product manual carefully.

•The image breaks frequently

Never power on before installation has been completed.

There is no part for users to disassemble voluntarily. The

Company is not responsible for any unauthorized modification

Before the installation of the company's products, please read

1) To check whether the camera power is connected, the

voltage is normal, and the power indicator is always on.2) Plugin the power again, to check whether the camera can

• Prohibited Unauthorized Disassemble

To check whether the USB port and USB cable of the terminal device are connected correctly.

•The definition is not good after accessing software To check the software video input settings to see if the camera video input is set to 1920 * 1080.

10

Control aspect •Remote controller doesn't work

1) Check and replace the batteries. 2) Check if the camera working mode is correct.

•The serial port cannot be controlled Check if the protocol and address of the camera are consistent.
 Check if the camera USB cable is well connected.

8. RS232

graphic	Number	Cameta	Number	Cameta
	1	DTR	5	RXD
	2	DSR	6	GND
	3	TXD	7	IR OUT
	4	GND	8	NC

	4	GND	8	NC
Monnentre				

9. Warranty and Service Information One-Year Warranty a limited one-year warranty applies to all Moertek products. Warranty terms Limited One (1) Year Warranty Moertek warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase.

You will need to return the product to the dealer in either its original packaging or packaging affording an equal degree of protection. The following information must be presented to obtain Warranty Service: (a) the product, (b) proof of purchase, which clearly indicates the date of purchase and the product type, and (c) reason for return.

11

This Warranty does not cover defects or damages that result from: (a) improper storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, extreme humidity, extreme heat, or food; (c) use of the product or accessories for commercial purposes or subjecting the product or accessories to abnormal usage or conditions; (d) other acts which are not the fault of Moertek. This Warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than Moertek or a Moertek dealer which is authorized to do Moertek warranty work. This Warranty does not cover defects or damages that result from the use of non-Moertek branded or uncertified products, accessories, or other peripheral equipment, nor does this Warranty apply to products which have not been charged for six (6) months. If the battery in a product has not been charged for a period of six (6) months, the product might not function or regain its full potential and long-term performance. Moertek does not offer any warranty for such performance.



12

size: 490x100mm, 128g铜板纸,黑白印,双面印,风琴折,成品尺寸:70x100mm